

battat®


Childhood Is Magical!®

CLOUD CASTLE™ Foam Fort Building Set




12
m+


2 Foam shapes expands when opened

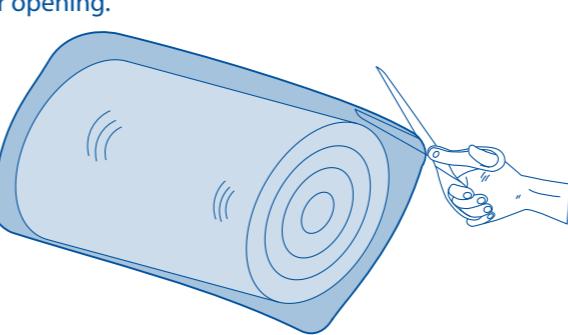

3 Close the zippers and make sure the pull tabs are fully hidden beneath the lining to prevent children from unzipping the foam shapes.

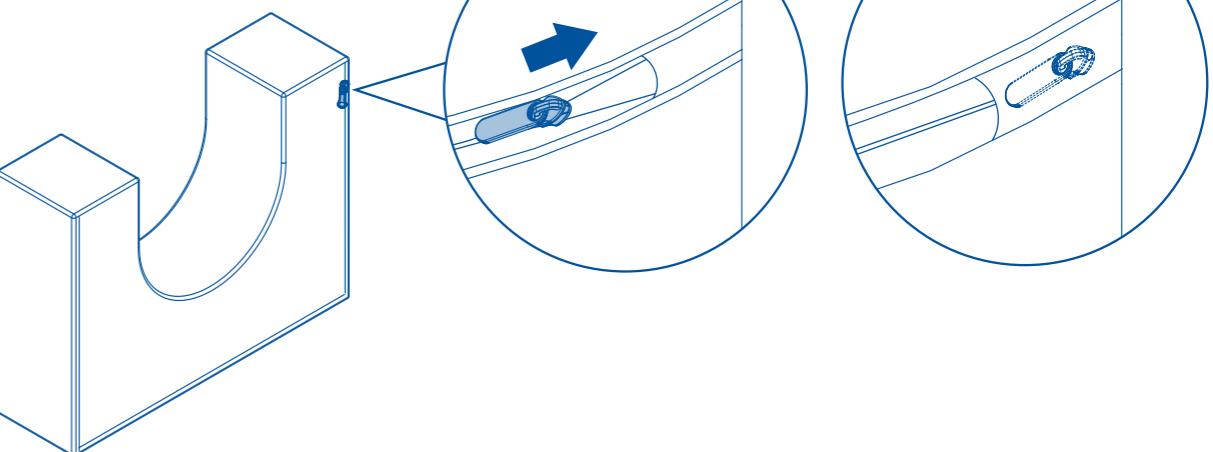

4 For the best results, leave the foam shapes to expand for at least 48 hours.

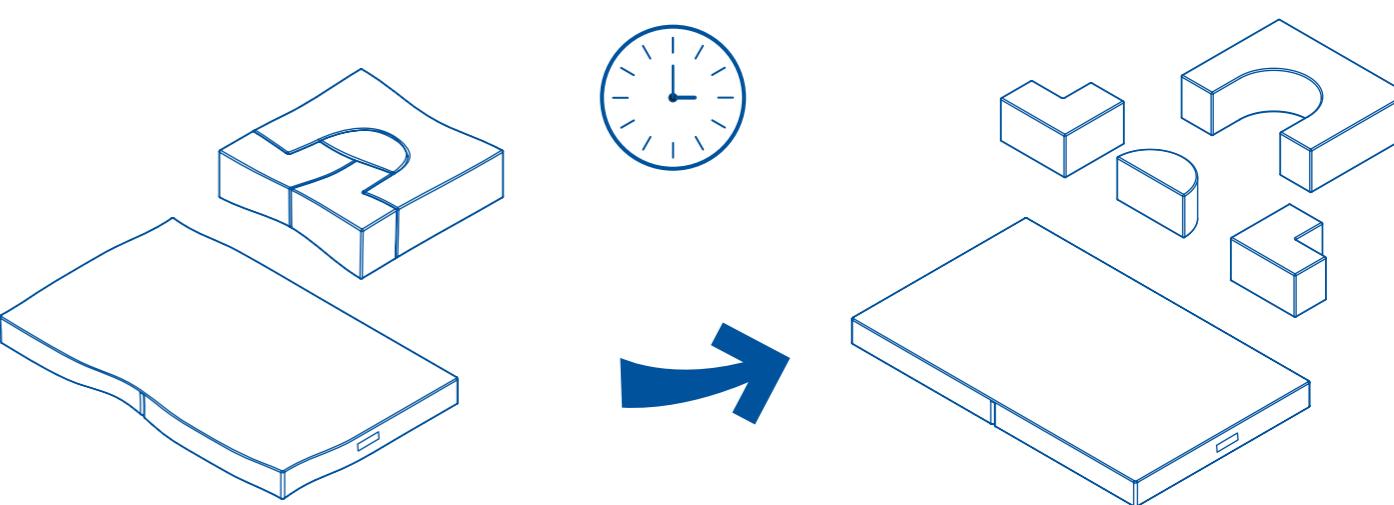

PARTS LIST



1 x foam arch



2 x foam stair



1 x foam half-sun

© 2024 MAISON BATTAT INC.
Manufactured for Maison Battat Inc.
8440 Darnley Road, Montreal, P.Q. H4T 1M4
Designed by Maison Battat Inc.
Battat® is a registered trademark of Maison Battat Inc.
Made in China.
All Battat® products meet all US standards.
Colors may vary.
Please retain this information for future reference.
Please remove all packaging materials
before giving to children.

5 Reshaping:


If the foam pieces do not achieve the desired shape after more than 48 hours, use a blow dryer (at a normal temperature) to correct the shapes.

- Keep the blow dryer 4 inches (10cm) from the foam pieces


- Reshape the warmed foam pieces by hand

CAUTION: do not keep the blow dryer focused on one spot.

Be sure to move side to side.

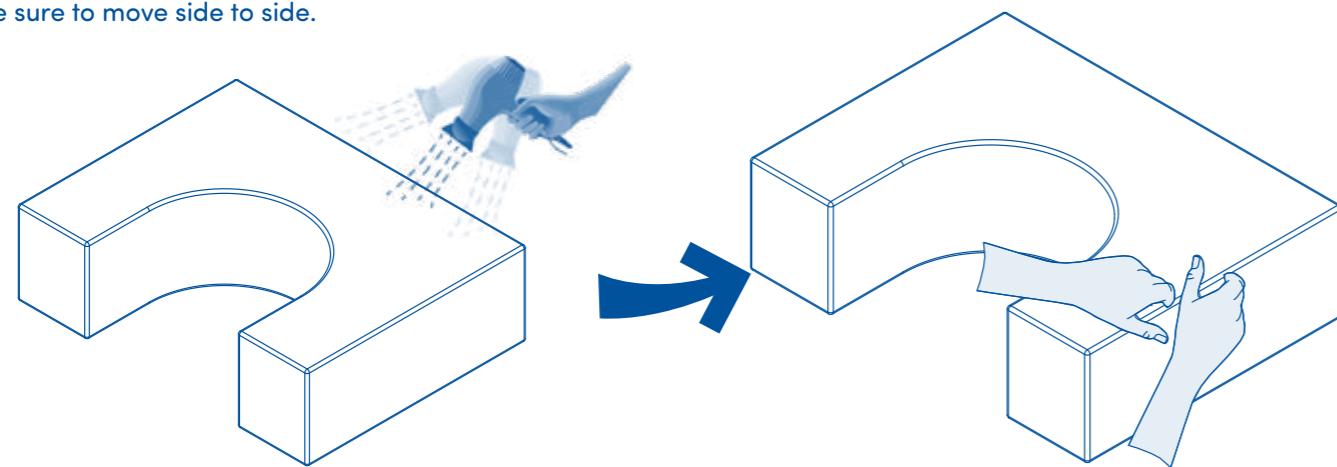

FINAL

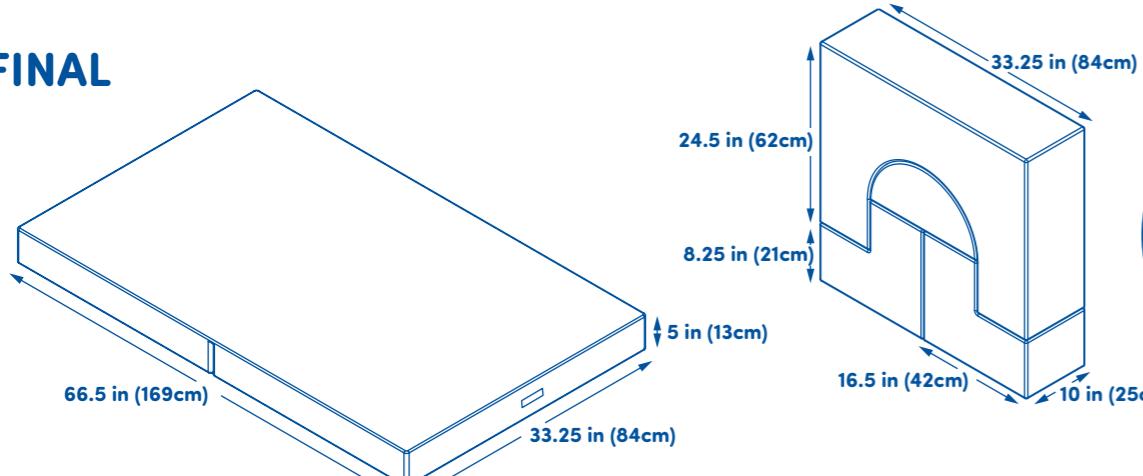



5
fun foam
shapes!

WASHING INSTRUCTIONS:

Remove the covers
Do NOT wash the foam shapes
Machine-wash at max. 30°C/86°F
Do NOT bleach
Tumble dry on low
Do NOT iron
Do NOT dry clean




OPTIONS FOR WRINKLE REMOVAL:

- Wipe the cover with a damp washcloth and dry it with a blow dryer
- Iron the cover with a steam iron without direct contact (do NOT use a dry iron)
- For the best results, wash and dry the cover

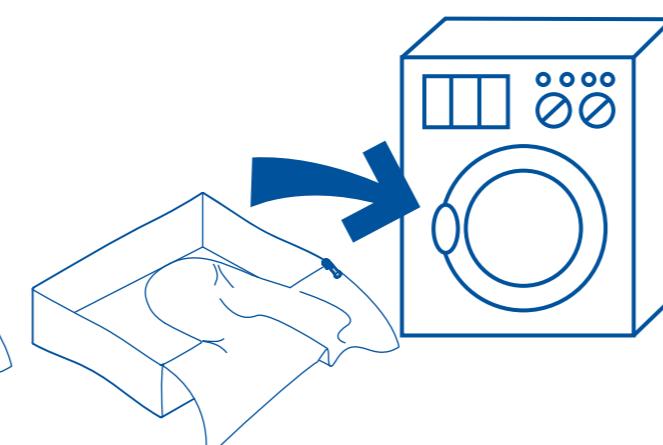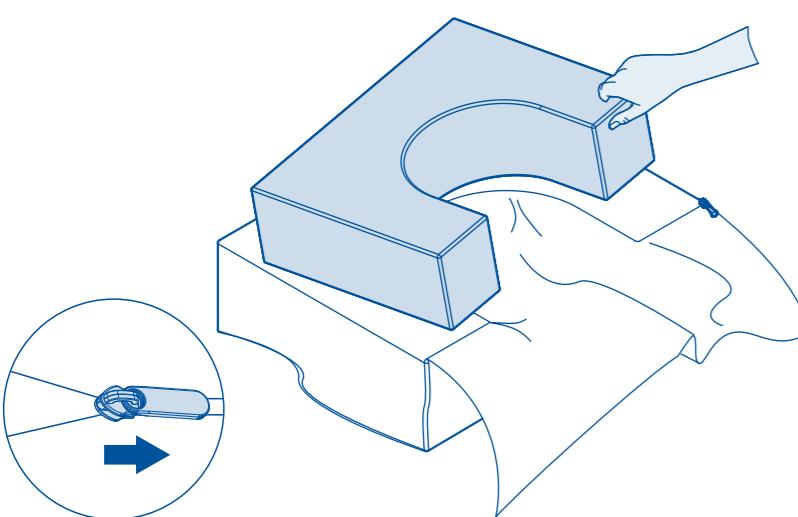

How to replace the covers after washing them:

When putting on a cover, pull on it with one hand and push the foam piece with the other. This helps when replacing a cover.

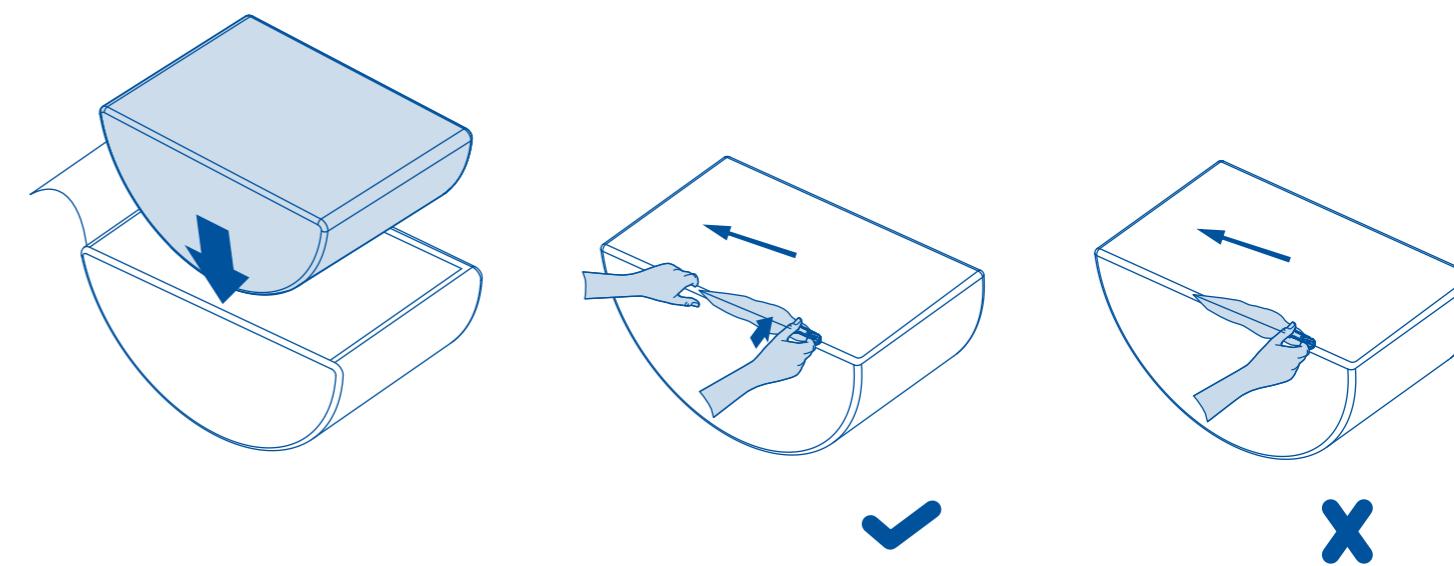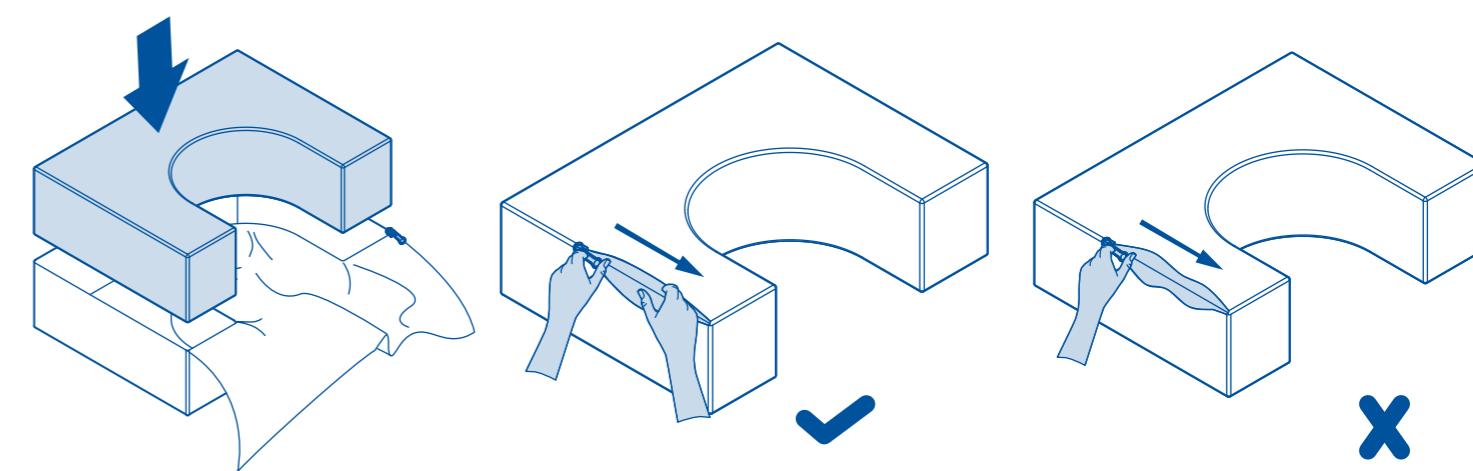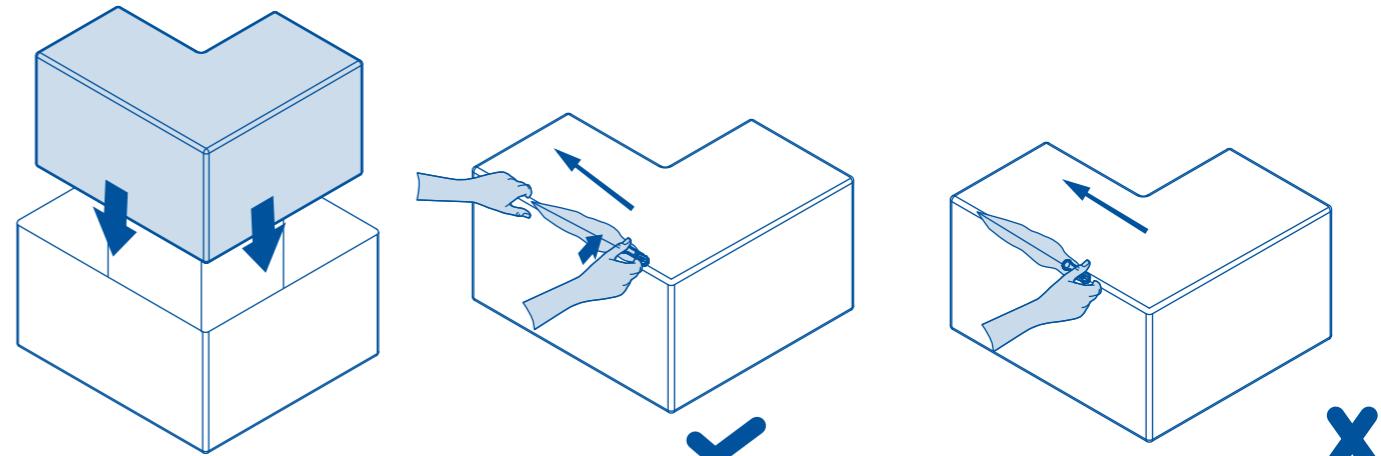

WARNING! Keep away from fire and heat sources to avoid permanent damage to the product.
Adult Assembly required.